

Mothercare Bouncer Vibrator and Music Operation

Vibrator

Press the vibrator button once to turn it on.

Press the vibrator button again to increase the intensity of the vibration.

Press the vibrator button a third time to increase the vibration to maximum.

Press the vibrator button a fourth time to turn it off.

Music

Press the music button once to play.

Press the music button again to increase the volume.

Press the music button a third time to increase the volume to maximum.

Press the music button a fourth time to turn the music off.

The music will cycle round several tunes until it is switched off.

Further Information

The User Guide, in PDF format, for assembly, care and operation in may be downloaded from our web site. Visit <http://www.networking-consultancy.com> and go to the Downloads section.